



Wiring altE junction box

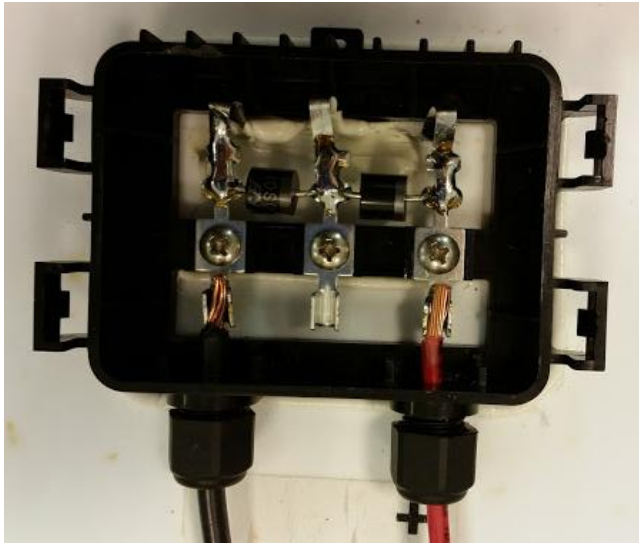

Solder wires onto attached terminals.



Or...Crimp lugs onto wire and attach with included screws.

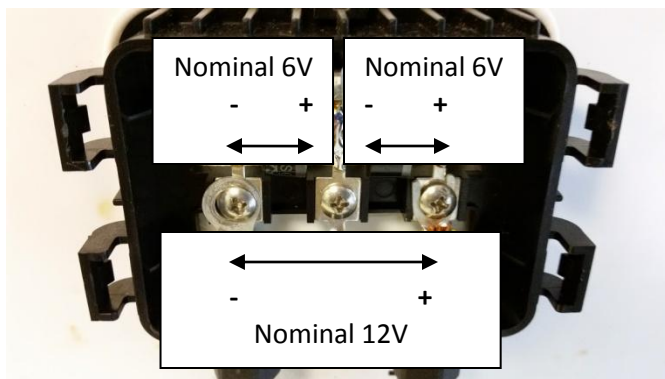

Use outside two terminals for full voltage.

If you need half the rated voltage; i.e. 6V on a 12V panel or 12V on a 24V panel, also use the middle terminal, if available.